

How to operate

Batteries


ASSA Code Handle is battery operated and is normally delivered with batteries fitted. Battery type CR2.

Battery Replacement, follow instructions on picture 1-3


With normal use of a few openings every day, the batteries will last for many years. When the battery capacity is reduced to a minimum, the red light will flash every time a button is pressed. The opening operation will also be delayed by one second after the right code has been given. Time to change the batteries.

Security


If wrong code is pressed 5 times, the handle is blocked for 3 minutes and cannot be opened. To release, press the right code twice.

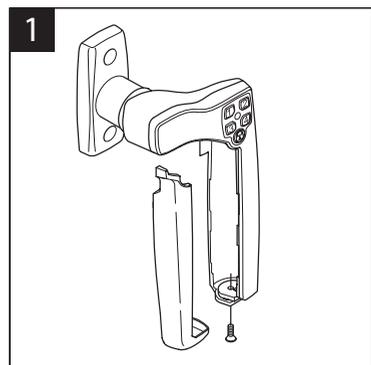


1. Dismount the screw at the bottom of the handle and open the battery cover.

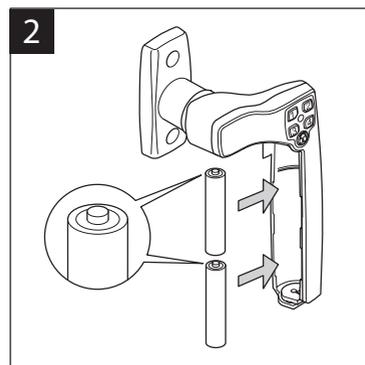


2. Fit the two batteries. Be sure to fit them in correct position.

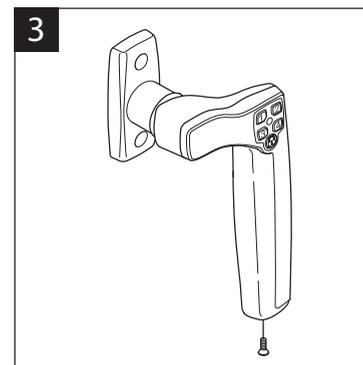


3. Return the cover and screw.

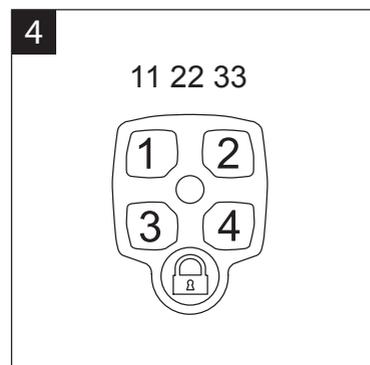

4. Unlock the handle by pressing the right code with the buttons 1-4. At delivery the handle is programmed with the code 1-1-2-2-3-3

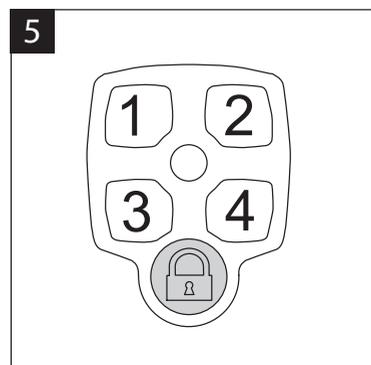

5. Lock the handle by pressing the button with the pad lock symbol.

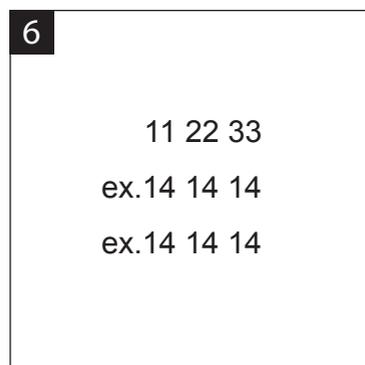

6. Change code
As all ASSA Code Handles are delivered with the same code from the factory, it is important to change to your own code. The code consists of 6 digits and can be changed unlimitedly. The code is changed by pressing the actual code once and then the new code twice (in the same way you change your password in your computer).

Please read instructions below before you start.

- Press the lock-button and keep it pressed for 3 seconds. The green light will stay on constantly.
- Press the actual code within 5 seconds. If the code is correct, the green light will start flashing and change to stay on constantly.
- Press the new code within 5 seconds, NB 6 digits! The light will flash green and change to stay on constantly.
- Repeat the new code within 5 seconds. If the new code is correctly given, the green light will flash rapidly. The new code is now valid.
- If something goes wrong in any step, the red light will flash rapidly and you have to start from the beginning. The original code is valid.


The actual code

Code _____
Code _____
Code _____
Code _____


ASSA[®]
ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions.


Fitting instructions

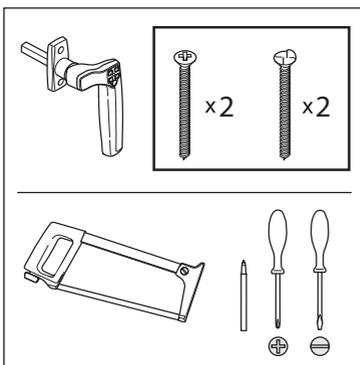


The package consist of 2 x-screws and 2 one-way-screws (security screws).

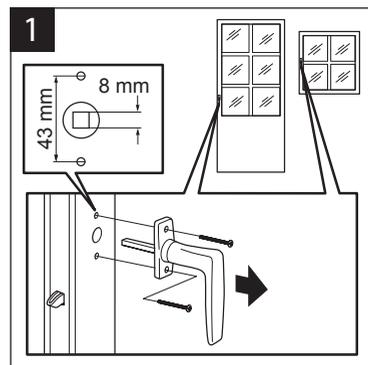


1. Oil and check the espagnolette so that the door/window is easy to open and close. If the distance between screw holes needs to be changed, use the cover plate Fix 7967.

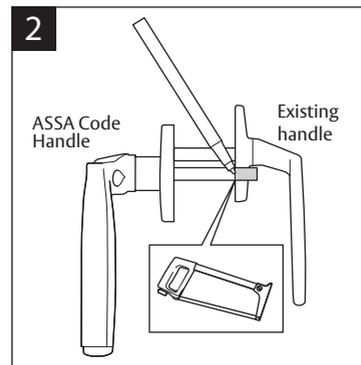


2. Cut the square spindle to correct length. If ASHA Code Handle should replace an existing handle, measure and cut the spindle according to the picture. If outer handle is to be fitted, adjust the length of the spindle for this, and use handle coupling Fix 833 or 833/16.

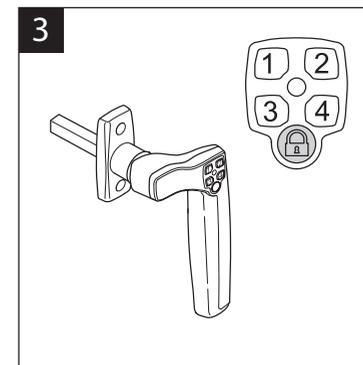


3. Lock the handle by pressing the lock-button.

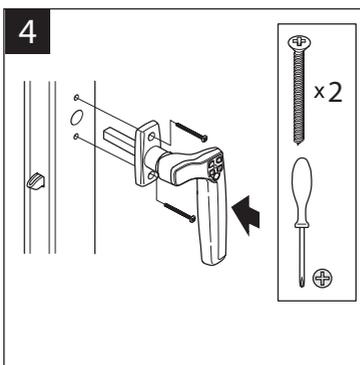

4. Fit the handle when the espagnolette is in closed position. Use ordinary screws (not one-way-screws).

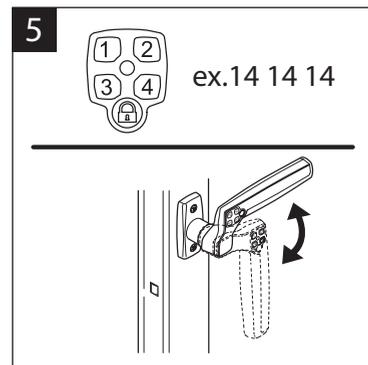

5. Check the function, open/close, lock/unlock.

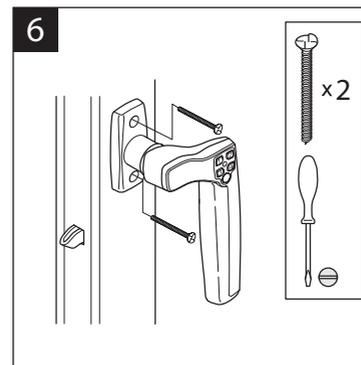

6. Replace the ordinary screws with enclosed one-way-screws (security screws).

ASSA Code Handle

Operating- and fitting instructions



ASSA
ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions.